

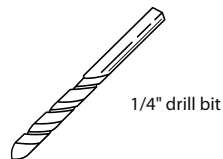


CAUTION: Use of manual tools recommended. When using power tools, adjust to lowest torque setting.

## TOOLS NEEDED

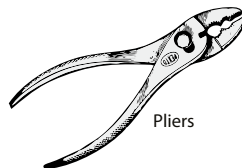


## IN THE BOX

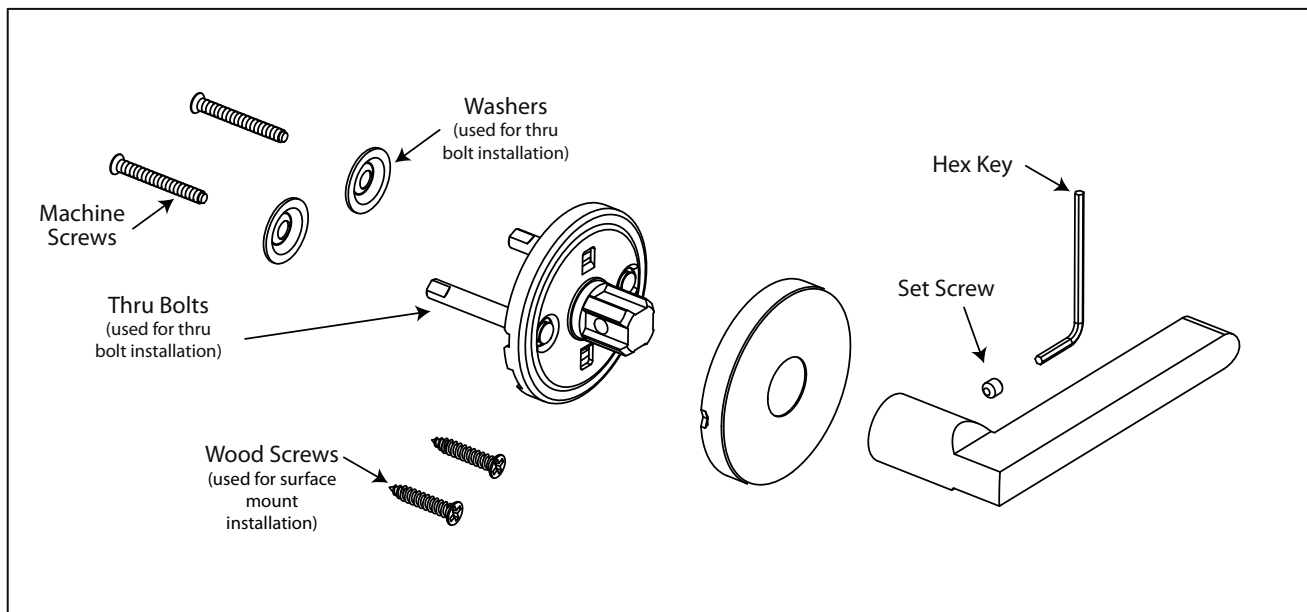


## INSTRUCTIONS *Thru-Bolt Installation (Recommended)*

### ► STEP 1:

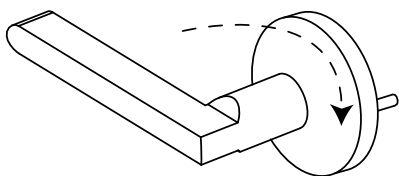


The lever assembly is fully reversible by rotating it 180° for left or right-handed installation

### ► STEP 2:

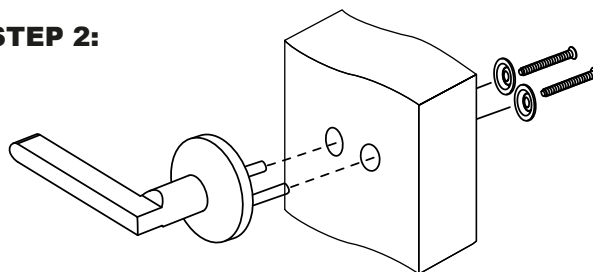


Drill two holes using the provided template and secure the rosette with the included hardware






### ► STEP 3:

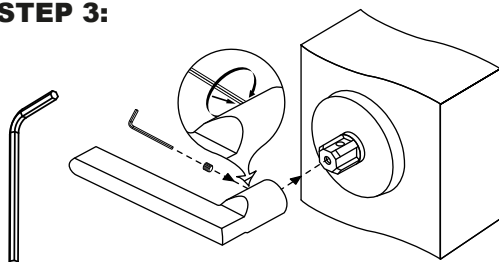

Tighten the set screw on the base of the handle

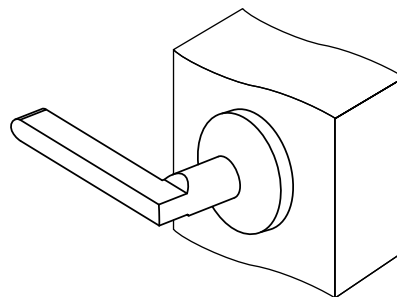

# INSTRUCTIONS *Surface mount installation*

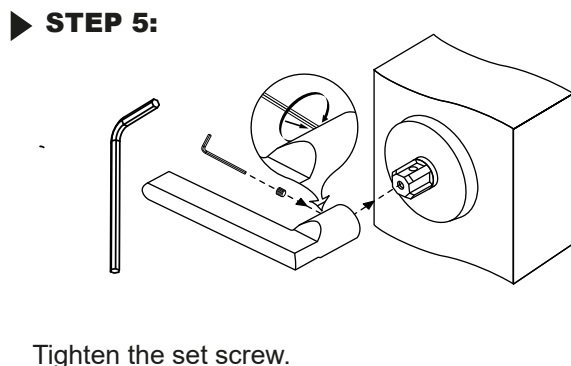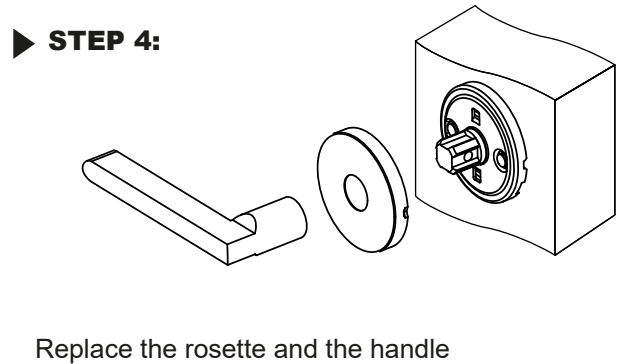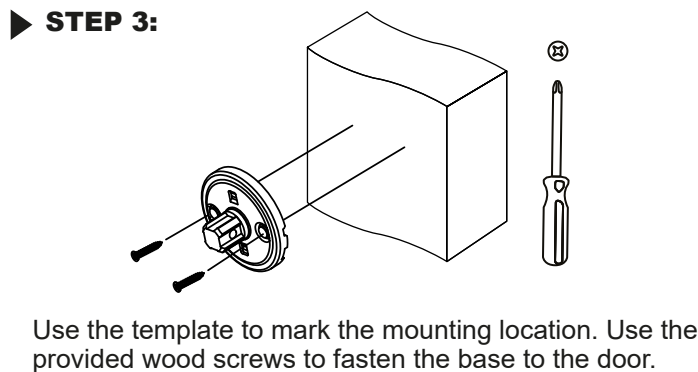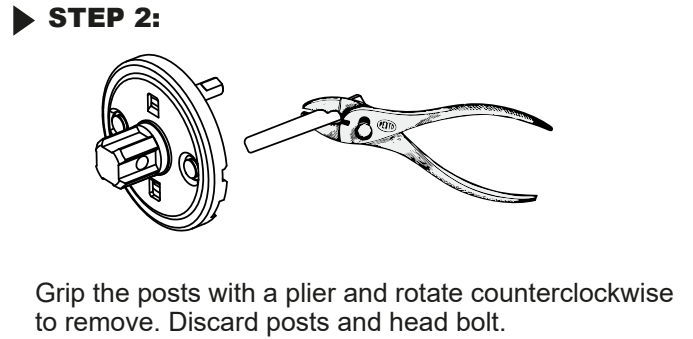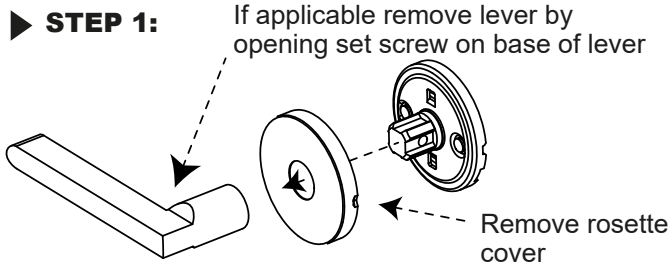

## TEMPLATE

for **thru bolt** installation, drill two 3/16" holes with the 1/4" drill bit at the points marked.  
for **surface mount** installation, fasten the wood screws at the points marked

